

2020

A large, stylized red 'H' logo that serves as the background for the central text. The 'H' is composed of two vertical bars and a horizontal bar, all in a vibrant red color. The horizontal bar is slightly wider than the vertical bars, creating a bold, blocky appearance. The logo is centered on the page and occupies a significant portion of the upper and middle sections.

HI-TECH
FOR GAMERS

HI-TECH MANUAL
ENGLISH

THANK YOU!

Congratulations to you on your new HI-TECH System! We are grateful to have you as part of our over-clocked gaming family and thank you for your purchase. To help you get started as easily as possible, we have prepared this booklet to help answer your questions. Please read it carefully to ensure the best gaming experience.

Flexible business hours:

If you want to personally deliver or pick up a new device, we would ask you to contact us.

You can reach us via Phone: +43 7229 61000 or email: office@hi-tech.at

Our address HI-TECH for Gamers GmbH
Johann Roithner-Straße 131, 4050 Traun

2

TABLE OF CONTENTS

THANK YOU! Contact	2
DAMAGES & RETURN	3
ATTENTION! Safety Information	4
CONNECTIONS (Monitor)	4
PACKAGE/ACCESSORIES	5
OPERATING & MAINTENANCE	5
WIN10 CHANGE LANGUAGE	6 – 7
SOUND Speaker Activation	8 – 9
WATERCOOLING Maintenance	10
NOTEBOOK Manual Reference	11
INFORMATION	12

DAMAGES & RETURN

DAMAGES

In spite of all care during the delivery process, damage may occur during transport. In this case the carrier will replace the damaged products only if you respect the following procedure.

Transport damage needs to be reported immediately when the product is handed over to you by the carrier (the deliverer of the parcel).

Clearly visible damage: demand a written confirmation of the damage on receipt of the parcel – by means of a written report on the scanner of the deliverer.

After that you need to inform HI-TECH about the identified transport damage.

We occasionally run test-shippings through quality assurance in order to offer highest standards. In such a case a red or purple sticker labeled SHOCKWATCH is located on the package. Please pay special attention to whether the control rod on this sticker is white or red. If it should be colored red, it means that the package has been partially carried out improperly. In this case, please indicate that on the removal order - even if the package is undamaged externally - that the control is red and the shipping was thus carried out improperly. We thank you very much for the help and hope you will enjoy your device!

RETURN

If problems occur with your PC which entitle you to warranty claims, we will have your PC picked up from your home address. If our inspection of the PC proves that the damage is not our responsibility and thus is excluded from any guarantee, you have to bear the costs of this transport. Please also be aware that you need to keep the original packaging (inner and outer) in case you need to return the product! Otherwise your PC

may show unnecessary transport damage due to insufficient packaging. We cannot assume liability for this kind of transport damage!

We thank you very much for the help and hope you will enjoy your device!

Since the different models (Gamer PCs, notebooks, etc.) are packaged differently, we ask you to contact us at service@hi-tech.at for more information. Furthermore, we can coordinate a return delivery together.

ATTENTION!

Please follow these safety instructions:



WARNING: Never push objects or spill liquid of any kind into this product.



ATTENTION: As opening or removing covers exposes you to dangerous voltages or other risks please be very careful and make sure your PC is disconnected from any power source. If any of the above mentioned misuse or other accidents such as dropping or mishandling occur, contact the HI-TECH team or qualified service personell in your area immediately.

CONNECTIONS

The connections for the monitor are located on the back of your PC.

MONITOR CONNECTION OF THE GRAPHICS CARD

Please connect your monitor to the existing graphics card (horizontal lines) and NOT to the mainboard (vertical) ports.



example

GRAPHICS CARD ONBOARD

If your PC has ONLY an onboard graphics card, please connect your monitor to the vertical connectors of the mainboard.

 


example

PACKAGE/ACCESSORIES

Please note the information that can be found on the side, front and rear wall of your gaming PC system.

example

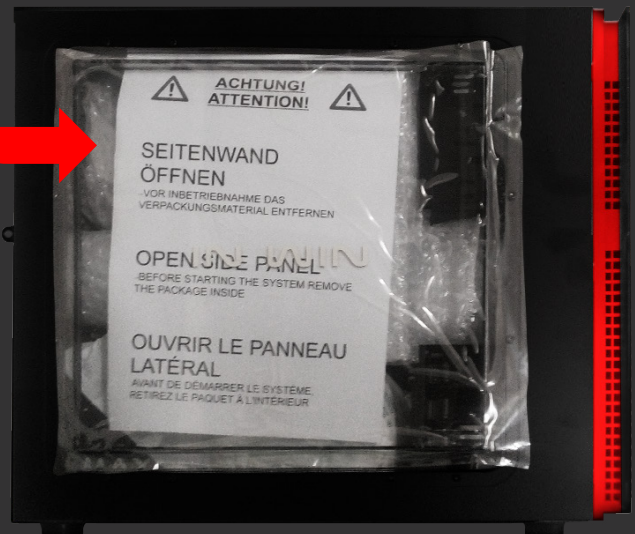

Please completely remove all packaging material from the inside of the computer case!

To do this, remove the side wall beforehand.

You can find detailed instructions on this at www.hitech-gamer.com/en/Quick-Start-Guide/

example



5

OPERATING & MAINTENANCE

 
Do not expose your PC system to extreme temperatures (room temperature only).

To ensure the longevity of your PC system optimally, we recommend an internal cleaning of the system on a regular basis. In particular, the heat sink and fan set can collect dust very easily, which can lead to overheating in operation and damage.


WIN10 CHANGE LANGUAGE [1]

An internet connection is necessary!

1. Right-click on the Windows icon at the bottom left and then go to "Settings".

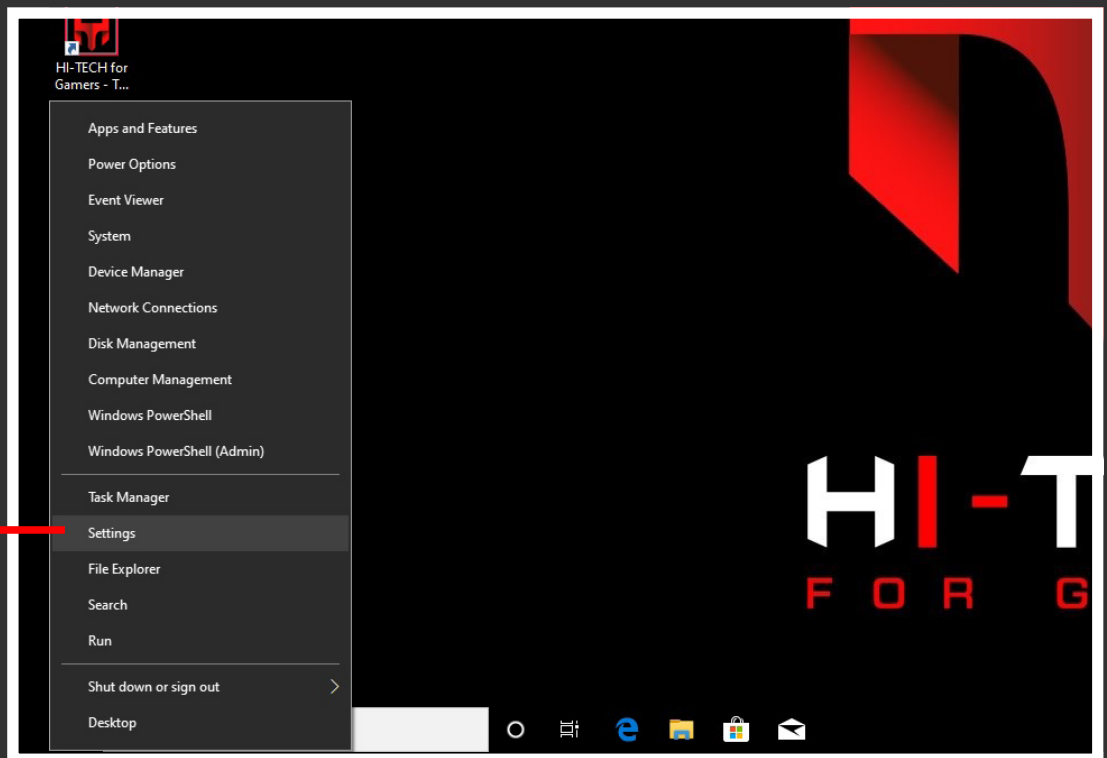


 2. Go to "Time & Language".

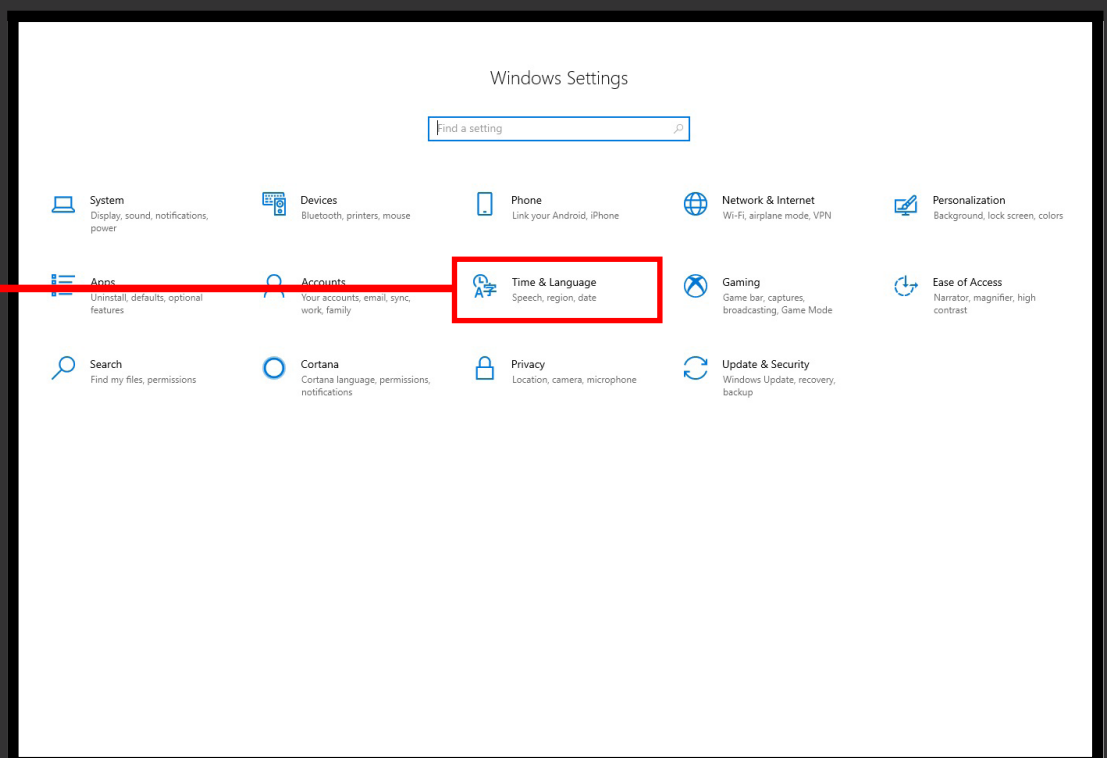



WIN10 CHANGE LANGUAGE [2]

 3. Go to "Language".
Select your preferred language here.

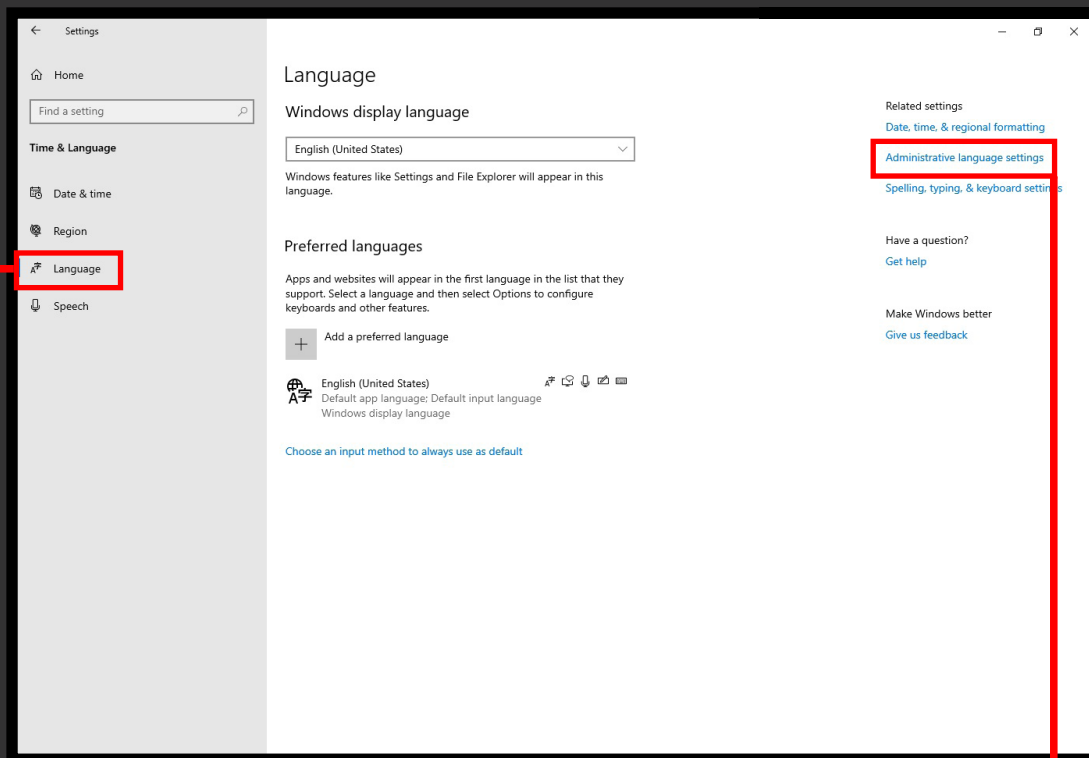

4. Then go to "Administrative language settings".

  5. Click on "Copy settings..."

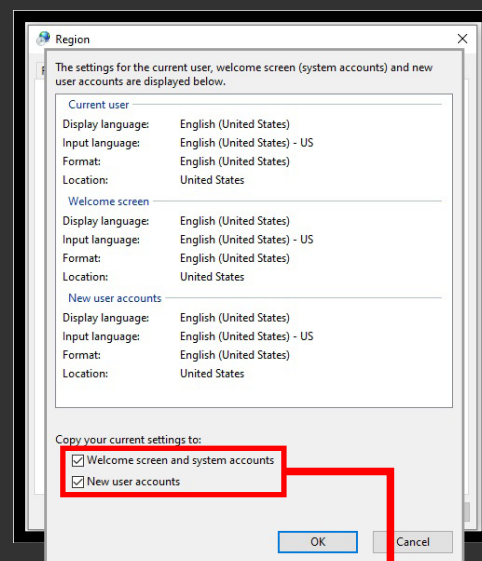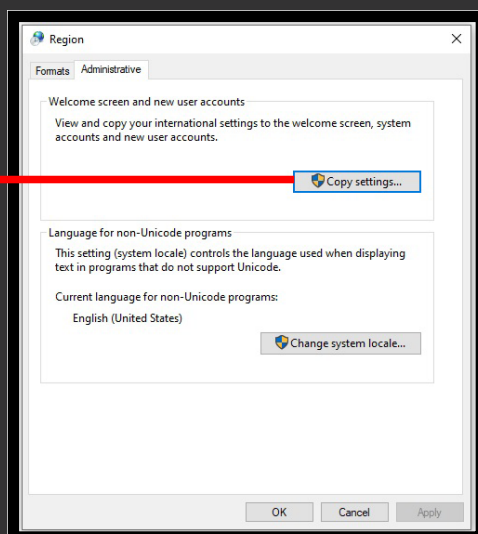


6. Check "Welcome screen and system accounts" and "New user accounts".
Confirm with "OK".
7. Restart is required.


SOUND [1]

If your speakers are not detected after connecting, you may need to disable the front jack detection. Here's how to do it:

 1. In the toolbar at the bottom right you will find a small speaker. Now right click on the speaker

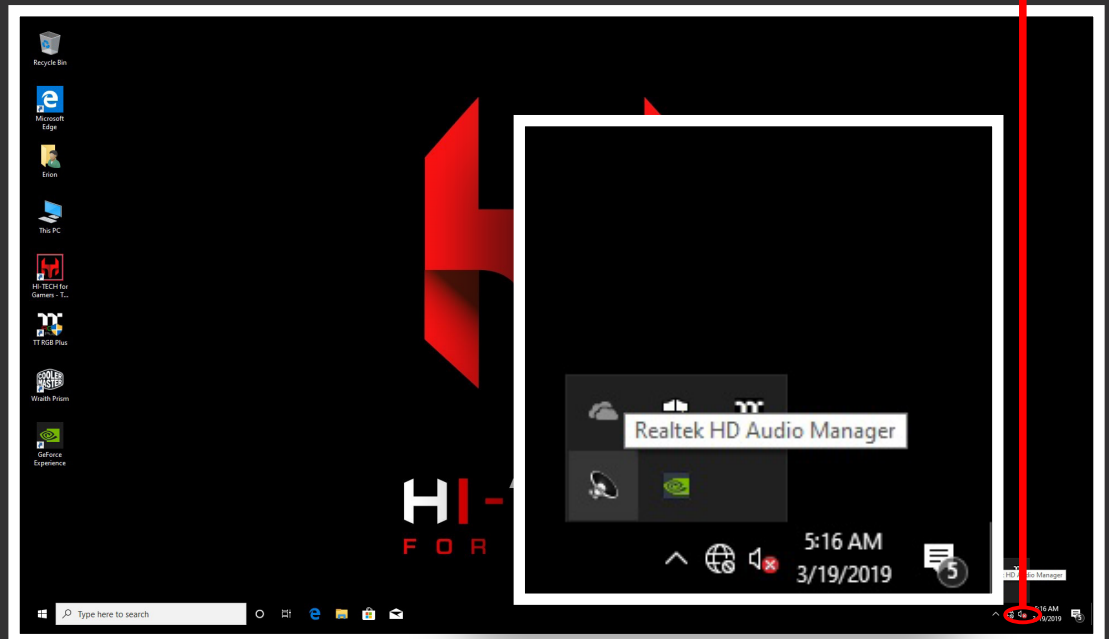


... and then select "Sound Manager".

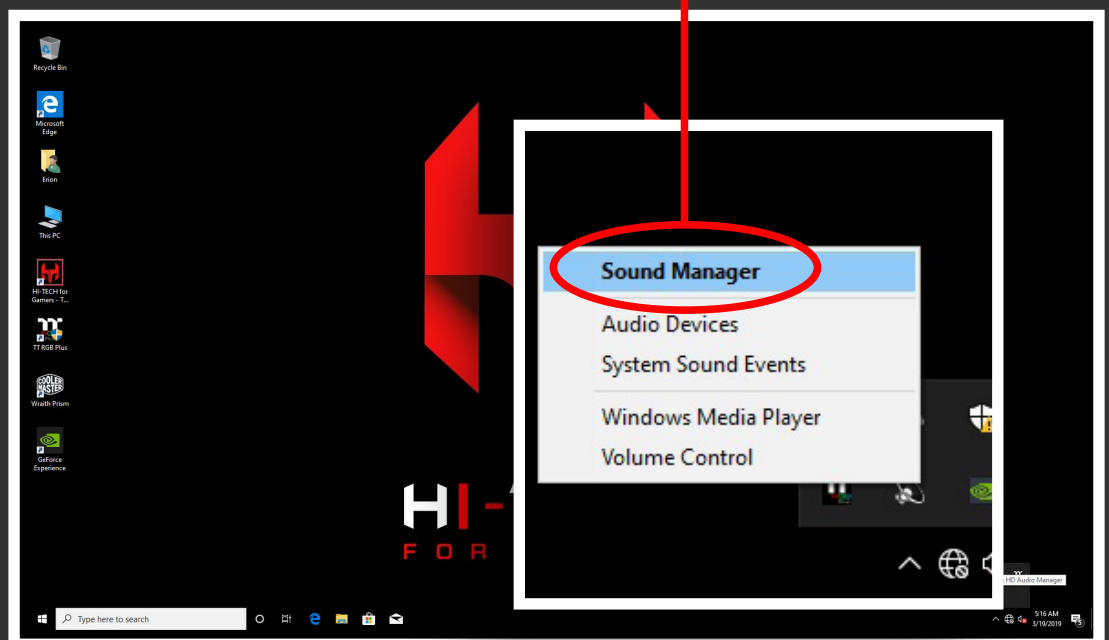 


SOUND [2]

 2. Now click on the wrench symbol at the bottom right.

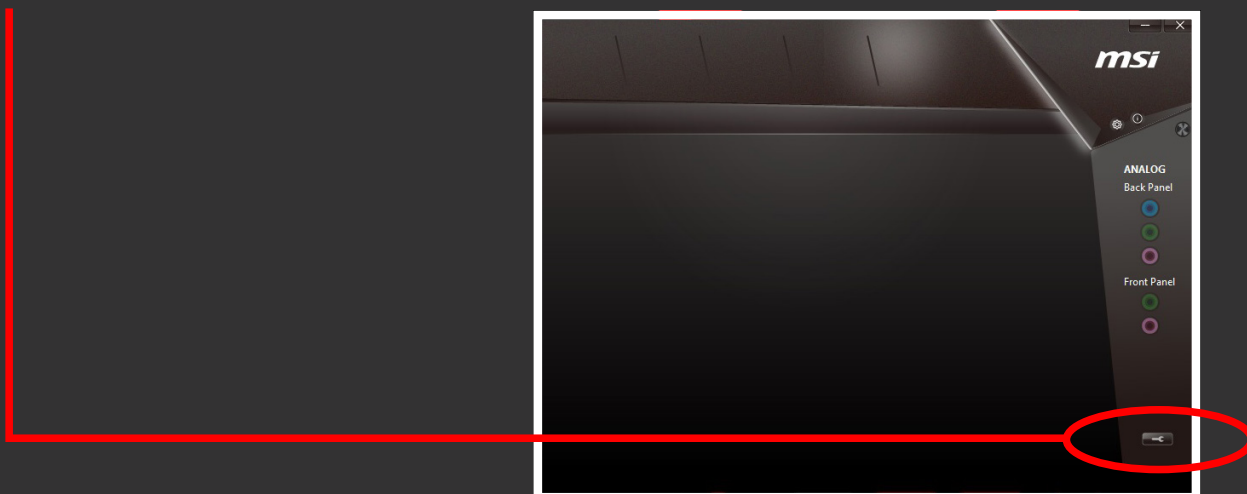


 
3. Check "Disable front panel jack detection".
Confirm with "OK".

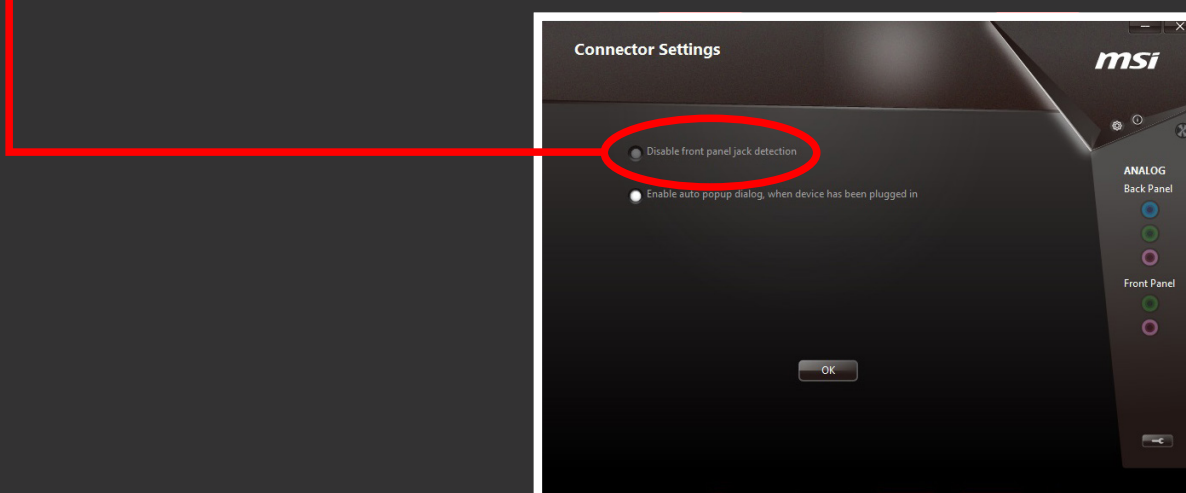

9

5.1 SOUND SYSTEM

  For a 5.1 sound system please note how you need to connect the ports:

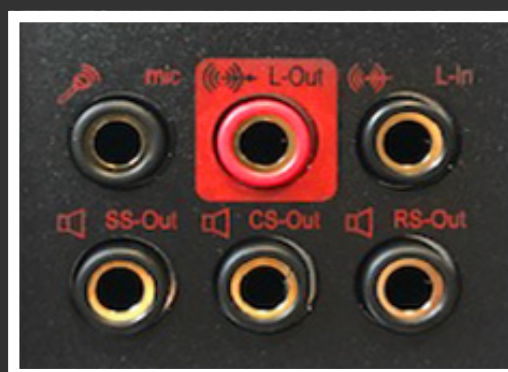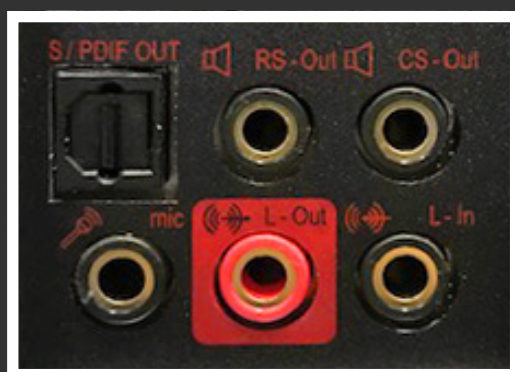

example

WATERCOOLING

COMPLETELY WATER-COOLED PC SYSTEMS

Please note the following steps when refilling the water of your water cooling system:

1. Turn off your PC and disconnect it from the power.
2. Remove the left side panel.
3. Remove the marked screw with the Allen key.
4. Fill in distilled water until the reservoir is filled up to 90%.
5. Now close the reservoir again and restart the PC.
6. Make sure there is no water around the screw while the PC is working. If this is the case, fix the hex screw!



Completely water-cooled PC system

example

CPU WATER COOLING

In contrast to completely water-cooled PC systems a water refilling for these systems is not necessary.



CPU water cooling

example

LAPTOP MANUAL

A printed manual is included with your laptop.





HI-TECH
FOR GAMERS

HI-TECH for Gamers GmbH

Johann Roithner-Straße 131, 4050 Traun, Phone +43 7229 61000

HI-TECH MANUAL Version 03/2020

Copyright® 2020 by HI-TECH for Gamers GmbH. All rights reserved.

In the course of continuous product improvements, we reserve the right to make technical and design changes.
Subject to typesetting errors. Suggestions for improvement by email to marketing@hi-tech.at.